

## WATCHING YOUR DIGITAL HERO 3 PHOTOS AND VIDEO ON A TV

### IMPORTANT!

Make sure your camera is set to the correct NTSC or PAL video setting or your camera will not work properly with your TV.

### SETTING CORRECT NTSC/PAL MODE FOR YOUR TV

Select **NTSC** if viewing on a TV in North America. Choose **PAL** if viewing on a TV outside of North America or if viewing on a **PAL** TV in any region.

- 1) Turn camera on.
- 2) Press the POWER/MODE button repeatedly until you see the SET icon.
- 3) Press the SHUTTER button to enter settings mode.
- 4) Press the POWER/MODE button to scroll through SET options until you see the **nSC** or **PAL** icon.
- 5) Press the SHUTTER button to cycle between **nSC** or **PAL** choices, then press the POWER/MODE button to save your setting.
- 6) Press the SHUTTER button until you see the ESC icon and press the POWER/MODE button to exit the SET mode. The camera is now set up properly for either NTSC or PAL televisions in your region.

### STEPS TO REVIEW PHOTOS AND VIDEO ON A TV

- 1) Plug your camera into the RCA ports on your TV with the included RCA/USB cable.
- 2) Turn on your camera. The first photo or video on your camera will appear on the screen. Videos will begin playing automatically.
- 3) Press the POWER/MODE button to advance to the next photo or video.
- 4) Press the SHUTTER button to return to the previous photo or video.

### DELETING PHOTOS AND VIDEO DURING TV REVIEW

- 1) While reviewing the photo or video you want to delete, hold the POWER/MODE button for 3 seconds and release it.
- 2) Follow the instructions on the TV screen. Press the SHUTTER button to confirm delete or press the POWER/MODE button to cancel delete.
- 3) Press the SHUTTER button again to double confirm delete or press the POWER/MODE button to cancel delete.

# GoPro

Be a **HERO**.™

